


AS-275A

INSTALLATION MANUAL

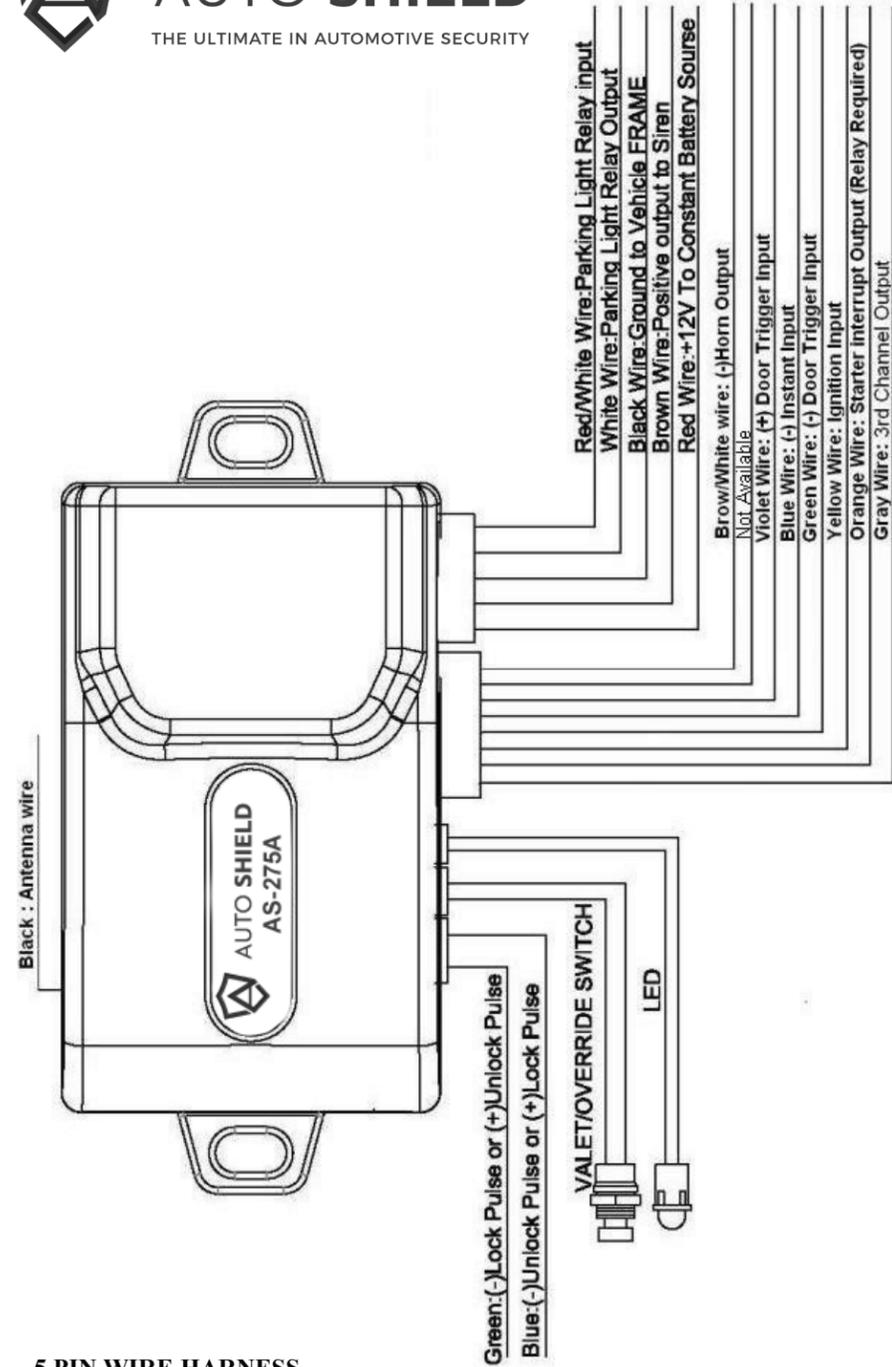

1. Brown/White: (-)Horn Output
 2. Not Available
 3. Violet Wire: Positive Door Trigger (+) Input
 4. Blue Wire: Negative Instant (-) Input
 5. Green Wire: Negative Door Trigger (-) Input
 6. Yellow Wire: Ignition Input
 7. Orange Wire: Starter Interrupt Output (Relay Required)
 8. Gray Wire: 3rd Channel Output
- * Siren and Starter Kill relay optional**

- ### ALARM FEATURE "A" PROGRAMMING:
- 1 Turn the Ignition 'switch 'ON/OFF' 3 TIMES and stay in OFF position.
 - 2 Push the Valet switch 3 times and hold in on the 3rd push. When a long chirp is heard, release the valet switch. You are now in the Alarm feature '1' programming mode.
 - 3 Press the transmitter button corresponding to the feature you want to program.
 - a. The factory default settings is always [1] LED flash, [1] chirp.
 - 4 Depress the transmitter button again to change the feature. Simply keep pressing the transmitter button again until the module advances to your desired setting.

Press Transmitter Button	One Chirp / LED one pulse Factory Default Setting	Two Chirps / LED two pulses	Three Chirps / LED three pulses	Four Chirps / LED four pulses
1	Active arming	Passive arming without passive door locking	Passive arming with passive door locking.	
2	Automatic Rearm off	Automatic Rearm on		
3	Instant Door Ajar error chirp	45 seconds delay Door Ajar error chirp.		
4 *	Siren Confirmation chirp on only	All Confirmation chirps On	Horn Confirmation chirp on only	All Confirmation chirps off
5 + *	Lock/Arm & Unlock/Disarm Confirmation Chirps	Lock/Arm Confirmation Chirp Only		
6 +	ALARM with Keyless Entry	Keyless Entry ONLY		
7. * +	Car Jacking feature Off	Car Jacking feature On		

Exit: Turn Ignition to 'ON' position, or leave it for 15 seconds. 3 long chirps will confirm exit.

Transmitter Programming

- Note:** This mode will only retain the last 4 remote transmitters programmed. If the transmitter memory is exceeded, the security system will start deleting transmitters from memory in chronological order.
1. Turn the Ignition 'switch 'OFF/ON' 3 TIMES and stay in ON position. "Within 15 seconds".
 2. Push the Valet switch 2 times and hold it on the 2nd push until a long chirp is heard then release the valet switch. You are now in the Transmitter programming mode.
 3. Press and hold any button of the transmitter until the siren responds with a confirming chirp, indicating the signal has been stored into memory.
 4. If you have additional transmitters (up to 4) that need to be programmed, repeat step 3 for each transmitter.
- Exit:** Turn Ignition to 'OFF' position, or leave it for 15 seconds. 3 long chirps & 3 parking light flashes will confirm exit.

ALARM FEATURE "B" PROGRAMMING:

- 1 Turn the Ignition 'switch 'ON/OFF' 3 TIMES and stay in OFF position.
- 2 Push the Valet switch 5 times and hold in on the 5th push. When a long chirp is heard, release the valet switch. You are now in the Alarm feature 'B' programming mode.
- 3 Press the transmitter button corresponding to the feature you want to program.

Press Transmitter Button	One Chirp / LED one pulse Factory Default Setting	Two Chirps / LED two pulses	Three Chirps / LED three pulses	Four Chirps / LED four pulses
1	Pathway illumination feature "off"	Parking light turns "on" for 30- second upon an unlock signal	Parking light turns "on" for 30- second upon an unlock signal & 10-second upon a lock signal.	
2	Ignition controlled door locks & unlocks	Ignition controlled door locks only	Ignition controlled door unlocks only	Without ignition controlled door locks & unlocks
3	0.8-second Door lock pulses.	3.5-second Door lock pulse.	Double pulse unlock	Comfort feature
4 *	3rd Channel Pulsed	3rd Channel Momentary		
5 + *	Gray Wire = Trunk (Channel 3) Output	Gray Wire = Two Step Door Unlock Output		
6. +	Horn chirp Duration Standard	Horn chirp Duration 50 mS	Horn chirp Duration 30 mS	Horn chirp duration 10 mS

Exit: Turn Ignition to 'ON' position, or leave it for 15 seconds. 3 long chirps will confirm exit.

SHOCK SENSOR ADJUSTMENT

1. Turn the Ignition switch 'ON/OFF' 3 TIMES and stay in OFF position.
2. Push the Valet switch 7 times holding in on the 7th push. Four chirps with a long chirp will be heard. Release the valet switch. You are now in the Alarm feature 'Shock Sensor' programming mode.
3. Press and hold button for 2 seconds. One long siren chirp will indicate the unit is ready to accept adjustments of the shock sensor.
4. Press button on the transmitter once. This will **decrease** sensitivity level by one. Each time the button is pushed and a decrease is made the siren/horn chirp will respond with [1] chirp. Two chirps indicate the minimum sensitivity. Warn away & full trigger will be deleted when minimum sensitivity is selected
5. Press button on the transmitter once. This will increase sensitivity level by one. Each time an increase is made the siren/horn chirp will respond with [1] chirp. Two chirps indicate the maximum sensitivity.
6. Hit the bumper or strong metal part of the vehicle to test the threshold level of the sensor.
 - a). Activate the warn-away (first stage the shock sensor), the siren will emit a short chirp.
 - b). Activate the full alarm (second stage the shock sensor), the siren will emit a long chirp.
7. When you are satisfied with the setting, press the button to lock in the adjustment. One long siren chirp will indicate the unit has locked in the adjustment.

Note: If 30 seconds of inactivity expires or you turn ON the ignition during of above steps, the unit will exit the program mode and return to the disarmed mode. Three long chirps will confirm exit.