



AUTO SHIELD

THE ULTIMATE IN AUTOMOTIVE SECURITY

CHANGING THE BATTERY IN YOUR TRANSMITTERS

AS-1WR:The AS-1WR transmitter use a 3-volt lithium ion batteries (#CR2032) To replace the battery, you will need to use a small flat blade screwdriver. Locate the small notch on the lower right side of the transmitter case next to the key ring. Using the flat blade screwdriver, carefully pry the top case from the bottom case. It should snap apart after breaking the seal. Before removing the batteries note the direction of the positive (+) terminal. Place the new batteries in exactly the same manner, being careful not to bend or damage the contact terminal. Snap the cases back together and then test the transmitter to insure it arms and disarms the alarm.



CR2032
3-Volt Batteries

TRANSMITTER OPERATION

Transmitter Button	System Function	Remark
	Lock Doors & Arm System	
	Panic function	Press and Hold for 3 seconds
	Car Locator	Under armed mode
	Arm and Delete The 2 Stage Shock Sensor	Press twice within 3 seconds
	Silent Arming / Disarming	Ignition in "off" position.
	Anti car-jacking	Ignition in "on" position.
	Unlock Doors & Disarm System	
	Two Steps Door Unlock & Disarm System	Press twice within 3 seconds.
	Trunk Release (Channel 3)	Press and Hold for 2 seconds
	Passive Arming By-pass	While the system Disarmed.
	Silent Arming / Disarming	
	Switching code For 2nd Car Operation.	

ALARM OPERATING CONDITION: (OPTIONAL)

Function	Siren or horn	Parking Lights	LED	Doors	Starter Disable
1. Arm	1 Chirp	1 Flash	Slow flash	Locking	On
2. Disarm	2or4 Chirps	2 or 3 Flashes	Off or Fast flash	Unlocking	Off
3. Trigger	Alarming	Flashing	Slow flash		On
4. Panic	Alarming	Flashing	Slow flash	Locking	On

ACTIVE LOCKING – LOCK & ARMING:

1. Press button on transmitter.
2. The siren or horn will chirp once and the parking lights will flash once indicating that the system is now armed. The vehicle doors will lock upon arming when interfaced with the security system.

Note: Defective sensor reminder: If the siren or horn sounds 3 chirps, then you have left a door, trunk, or hood lid ajar. (OPTIONAL)

AS-275A

OPERATION MANUAL

SILENT LOCKING AND UNLOCKING : ARMING / DISARMING: Press the + button together on the transmitter to LOCK or UNLOCK your security system, No chirp sound will be heard; arm / disarm confirmation will be through the vehicles parking lights only.

SHOCK SENSOR / OPTIONAL SENSOR BY-PASS: Pressing the button on the transmitter twice within 3 seconds will arm the security system and by-pass the shock sensor. The system will chirp one additional time to confirm the sensor bypass mode was activated. The sensor bypass feature is programmed to activate for one arming cycle only. The security system will return to normal operation during the next arming cycle

PASSIVE LOCKING OR ARMING : Programmable

Active arming / disarming is controlling your security system via the remote transmitter. This security system is equipped with an optional Passive Arming feature, which allows the security system to arm 30 seconds after the last door is closed. Operation is as follows.

1. Turn the ignition to the "OFF" position and exit the vehicle.
2. After all entrances are closed, the security system LED will flash fast for 30 seconds. If you reopen any door / hood / trunk, the security system LED will stop flashing. It will begin flashing again once all vehicle entrances are closed.
3. After 30-second timer has elapsed, the security system will automatically "ARM". The siren or horn will chirp [1] time and the parking lights will flash [1] time.

PASSIVE DOOR LOCKING: Programmable

The vehicle doors will automatically lock after passive arming cycle has been completed.

ACTIVE UN-LOCKING – UNLOCK & DISARM:

1. Press the button on the transmitter.
2. The siren or horn will chirp twice and parking lights will flash twice to indicate that the security system is now disarmed. The vehicle doors will unlock when interfaced with the security system.

TAMPER DISARMING: (OPTIONAL). If the alarm is triggered; Upon disarming the system the siren or horn will chirp 4 times and parking lights will flash 3 times. This will indicate that the alarm has been triggered while armed.

TWO STEP DOOR UNLOCK: (OPTIONAL) This feature will independently unlock the driver's door only when disarming the security system. Pushing the button on the transmitter a second time within 3 seconds will unlock the entire vehicle. (Optional. Additional installation required).

AUTOMATIC RE-LOCKING or RE-ARM: If this feature is selected, the security system will automatically re-arm itself 60 seconds after disarming with remote transmitter. Automatic rearm will cancel if any door is opened before the 60 seconds timer has elapsed.

DISARMING WITHOUT A TRANSMITTER

The Override function may be used if the remote transmitter is lost or inoperative.

1. Enter the vehicle and turn the ignition switch to 'ON' position. (Alarm will sound.)
 2. Within 10 seconds push and release the valet switch
- The alarm will stop sounding and enter the disarm mode. You can now start and operate the vehicle normally.

VALET MODE:

The valet switch allows you to temporarily bypass all alarm functions eliminating the need to hand your transmitter to parking attendants or garage mechanics. When the system is in valet mode, all alarm functions are bypassed, however, the remote panic feature and remote door locks will remain operational.

Enter Valet Mode:

1. Turn the ignition to "ON" position.
2. Push and hold valet switch for 2 seconds or until the LED turns on. The LED will remain on as long as the system is in 'valet mode'.

Exit Valet Mode:

1. Return to normal operation, turn ignition 'ON'.
2. Push and hold valet switch for 2 seconds; the LED will turn off indicating the system is exiting the valet mode.

PANIC FUNCTION:

The transmitter can be used as a remote panic switch to manually trigger the alarm in case of emergency.

1. Press and hold the button on the transmitter for 3 seconds. The alarm will immediately sound.
2. To stop the alarm, press and hold the button for 3 seconds on the transmitter, the panic mode will be turned off immediately.
3. If the button is not pressed, the alarm will automatically stop after 30 seconds.

TRIGGER THE SYSTEM: (OPTIONAL) If alarm option is installed.

When armed, your vehicle is protected as follows:

1. Light impacts will trigger the warn-away signal. A long chirp from siren /horn.
2. Heavy impacts / Doors open / Hood open / Trunk open / Turning on the ignition switch- All will trigger the programmed sequence.

The starter disable relay (if installed) prevents the vehicle's starter from cranking. The siren or horn and parking lights will turn on to alert of an intrusion for 30 seconds. Then the siren or horn will stop and automatically reset and re-arm. If any the sensors or detectors are still active, the alarm system will sound a maximum of six-30 second cycles.

ANTI CAR-JACKING: (OPTIONAL) If alarm option is installed.

Warning: If you don't need the carjacking function in this alarm system, be sure to set carjacking feature "OFF". This system is default setting Car-jacking "OFF".

1. TRANSMITTER ACTIVATES THE CAR JACKING:

Press and hold + button on the transmitter for 1 second while the vehicle's ignition is ON. The parking light will turns on for 1.5" seconds to indicate car jacking activated.

2. DOOR SWITCH ACTIVATE CAR JACKING:

1. Turn the ignition switch to "ON" position, the system is armed.
2. Once the system is armed, if you are forced from the vehicle, the system will activate the carjacking trigger when the door is opened and closed while the ignition is "ON".

TRIGGER THE CAR JACK MODE:

3-timer circuits will function as follows:

First timer:

- a. 50 seconds after the system has been triggered. The siren or horn will start chirping for 15 seconds.
- b. During this 15 seconds period of chirping, you will be alerting to push the **valet switch** once to turn off the car-jacking feature.
- c. If not, it will enter second timer car jacking.

Second timer:

65 seconds after the system has beer triggered. The siren or horn starts alarming and the parking light starts flashing.

Third timer:

90 seconds after the system has been triggered

- a. The siren or horn will still be alarming and the parking light flashing.
- b. The starter disable will activate to prevent the vehicle from starting.
- c. It will remain active until the vehicle's battery power exhausted.

OVERRIDE THE SYSTEM TO TURN OFF CAR JACKING:

Turn the ignition switch from OFF to ON, and within 10 seconds push **valet switch**. The siren or horn will stop and the system will be disarmed

IGNITION CONTROL DOOR LOCKS.

If the vehicle's door locks have been interfaced to the security system, the system will automatically lock the vehicle's doors when the ignition is turned "ON" and /or unlock the vehicle's doors when the ignition is turned "OFF".

TRUNK RELEASE: Press and hold button on transmitter for three seconds to remote control the trunk release or other electric devices.

CAR LOCATOR : Press the button on the transmitter when the vehicle is in the armed / locked mode to active car locator function. The siren or horn will chirp 6 times. The parking light will flash 12 times, allowing you to easily locate your car.

YEAR LIMITED WARRANTY PROVISIONS

Auto Shield LLC offers a 1 Year limited warranty from the Date of Purchase on the Auto Shield brand of remote start and security products which protects users of its products from defects in material and workmanship under normal use and circumstances. This warranty only covers materials both sold and installed by an "Authorized Dealer" of Auto Shield product.

"Authorized Dealer" is defined by Auto Shield as a company who qualifies to purchase Auto Shield products directly from Auto Shield LLC, or one of its approved distributors. Thus, products not sold nor installed by an "Authorized Dealer" are not covered by this warranty. This includes, but is not limited to, Auto Shield products sold on Amazon.com that are not supplied directly by Amazon or eBay.com.

Auto Shield does NOT cover RF kits and physical damage to remote transmitters. Auto Shield remote transmitters are covered by a 1-year warranty, which protects users from defects in material and workmanship.

Auto Shield LLC warrants to the original purchaser that this product shall be free of defects in material and workmanship under normal circumstances for the period of time that the original owner of this product owns the vehicle in which it is first installed;

Neither Auto Shield LLC or any of any entities connected therewith shall be responsible or liable for any damages whatsoever, including but not limited to, any consequential damages, incidental damages, damages for loss of time, loss of earnings, commercial loss, loss of economic opportunity and the like that may or may not result from the operation of Auto Shield products. The manufacturer does offer a limited warranty to replace or repair as described above.